

ELEV 104



NOTE: Right hand circuits when runway 06 in use. Take-off on 06 start right turn within 2 miles from end of runway. On authorized straight-in approaches to runway 24 maintain minimum of 1500' ASL until past Cartierville runway 28.

NOTE: High intensity bar lights (clear) at 300' intervals. Long bar light (clear) 1000' from runway. Centre bar 200' from runway and the two adjacent bars off centre line are red. Low intensity amber lights with every other bar light (200' intervals).

Range to airport 3.9 miles—103°

102°

VOR
MONTREAL RADIO
116.3 UL

ELEV 103

ELEV 99

Uncontrolled when wind in excess of 20 mph.

7000' X 200' ASPHALT

7000' X 200'

 
ASPHALT

Control Tower

CAUTION: Construction in progress.

UNIFORM
201 U

BEARINGS ARE MAGNETIC
DISTANCES IN STATUTE MILES
Elevations in FEET above MEAN SEA level

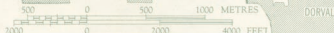

GROUND FACILITIES

HANGARS
Storage space available

REPAIRS
Major. Minor. Servicing

FUEL AND OIL (24 hour service)
Gas: All octane ratings available.
Oil: All seasonal grades available
Jet fuel

GENERAL
Telephone. Telegraph. Teletype. Bus. Taxi
Hotels in Montreal

WEATHER SERVICE
District Aviation Forecast Office
Continuous Forecast Service.

FIELD DATA

LIGHTING
Rotating Approach (amber) to runway 24 Strobe beacon located each side of threshold runway 28 For runway 10 and 06 see note above. Threshold (green). Runway (clear). Taxi (blue). Obstruction (red). Landing direction indicator. Wind direction indicator.

OPERATED BY
Department of Transport

SEASONS USABLE
All year

REMARKS
Customs port of entry and exit
Assigned as regular aerodrome for North Atlantic flights.
If necessary to fly over Cartierville airport maintain a minimum of 1500' above ground
NOTE: Intentional use of airport restricted to aircraft capable of two-way voice communication with the tower.

RADIO DATA

(Radiotelephony frequencies only are shown)

RADIO RANGE Class: SBRAZY-PTX	GUARDS See reverse side	TRANS See reverse side
CONTROL TOWER VOR Class: BVOR	As shown	
ATC CENTRE, ILS, RCAF AIR GROUND, INTERNATIONAL AIR CARRIER and AIR CARRIER Available		
See Radio Facility Charts for complete list of frequencies.		
WEATHER BROADCAST At H+22 and 52 from range for Montreal, Ottawa, Megantic, Quebec and Montreal.		

REFER TO

RF CHART Can-RF 4 (A)
1:506,880 Ottawa-Montreal
1:1,000,000 Gatineau River (2263).