
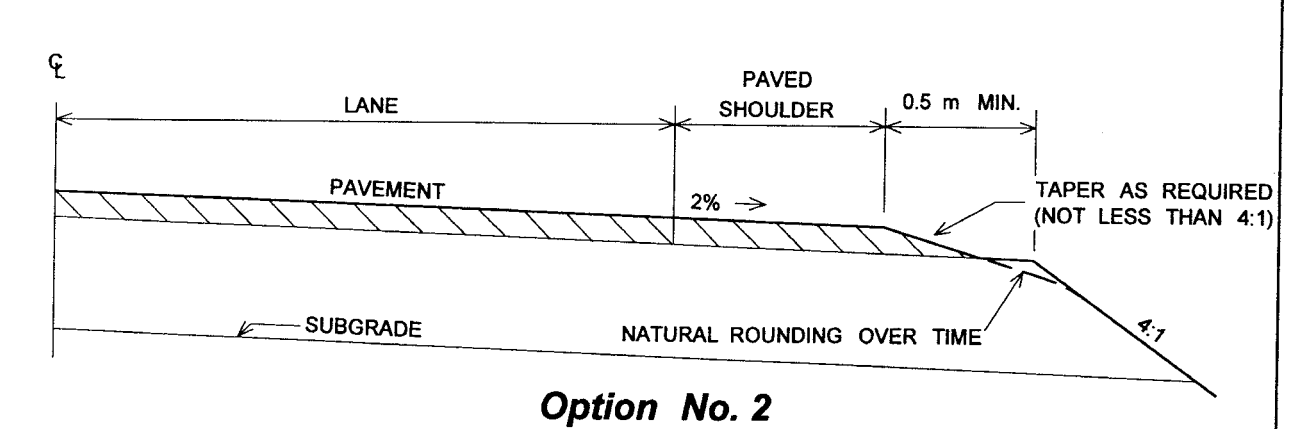
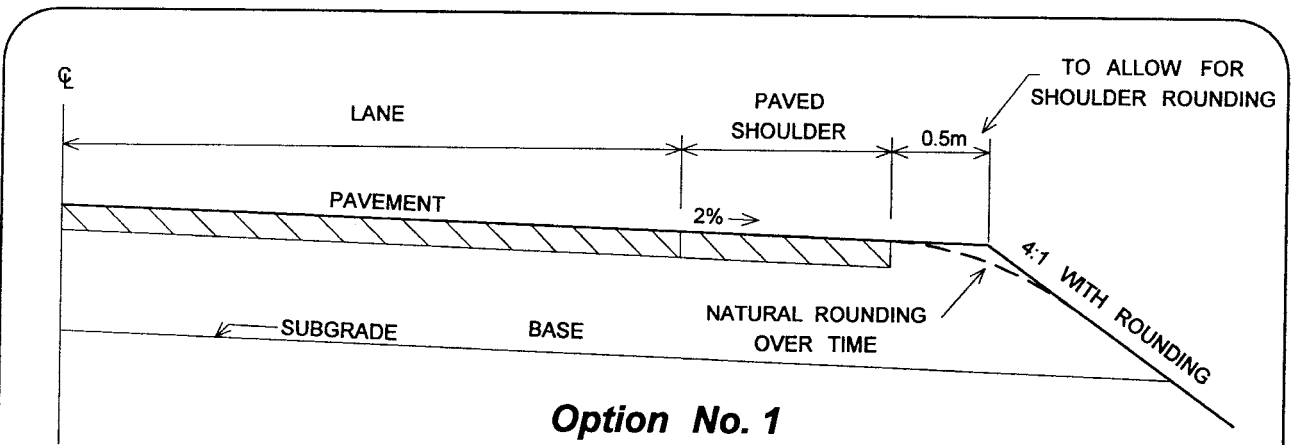


SHOULDER EDGE TREATMENT POLICY TP: 5 / 98

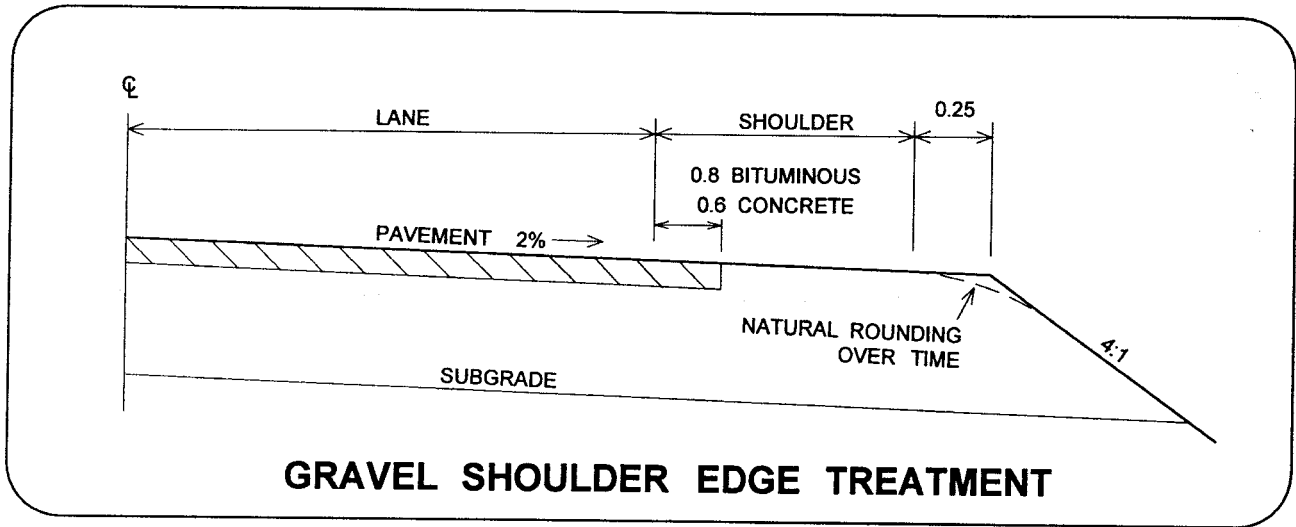

PAVED SHOULDER EDGE TREATMENT

NOTE: SUBGRADE WIDTH = $2 \times [\text{LANE WIDTH} + \text{SHOULDER WIDTH} + 0.5 + 4 \times (\text{BASE} + \text{PAVEMENT DEPTH})]$